

The documentation for my accessory indicates that no drivers are required, but Windows keep asking me for one during the installation process. How can I proceed to installing my accessory?

Your Thrustmaster accessory does not require any specific driver. Upon connecting it to the computer, Windows should automatically recognize it and install generic drivers. If this is not the case, proceed as follow.

When the installation wizard appear:

- First select **Install from a list or specific location**
- In the next Window **Search for the best driver....**
- Uncheck **Search removable Media.**
- Check **Include this location in the search**, then point Windows toward the following location:

C:\WINDOWS\inf

This will allow Windows to find the drivers for your accessory.

Once completed, open **Game Controller** (Windows Control Panel). After a few seconds, your accessory will appear with the status **OK**, indicating that it has been installed properly. You will now be able to test its functionality.

If, however, Windows still cannot install your device or recognize it as "Unknown Device", it is probably defective and should be returned to the retailer for exchange.