

BIG & TALL | #8/#9 MECHANISM

HOW TO OPERATE

Ratchet Back Height Adjustment

When seated in the chair, take both hands and reach behind and grab the chair back. Slowly raise chair back incrementally into desired position. To start process over, raise chair back to the highest position and it will automatically release, dropping to the lowest position. The incremental height adjustment process can start over.

Back Angle Adjustment


When seated in chair, drop right hand and lift up on the back paddle. When engaged the back will freely move or tilt forward or back. By leaning into the back you can achieve the angle position desired. Once position is determined, release paddle and back will permanently lock into position.

Seat Height Adjustment

Determine user seat height. When seated in the chair, lift body weight from the seat and at the same time, drop right hand and lift up the paddle under the right side of the seat. This engages the pneumatic height cylinder. When desired seat height is achieved, release paddle. Chair will permanently lock into seat height position. To reduce seat height, follow same procedure EXCEPT remain seated in the chair.

Height Adjustable Arms

Turn dial until the desired height of the arm is reached. Turn the dial in the opposite direction to lower the arm.

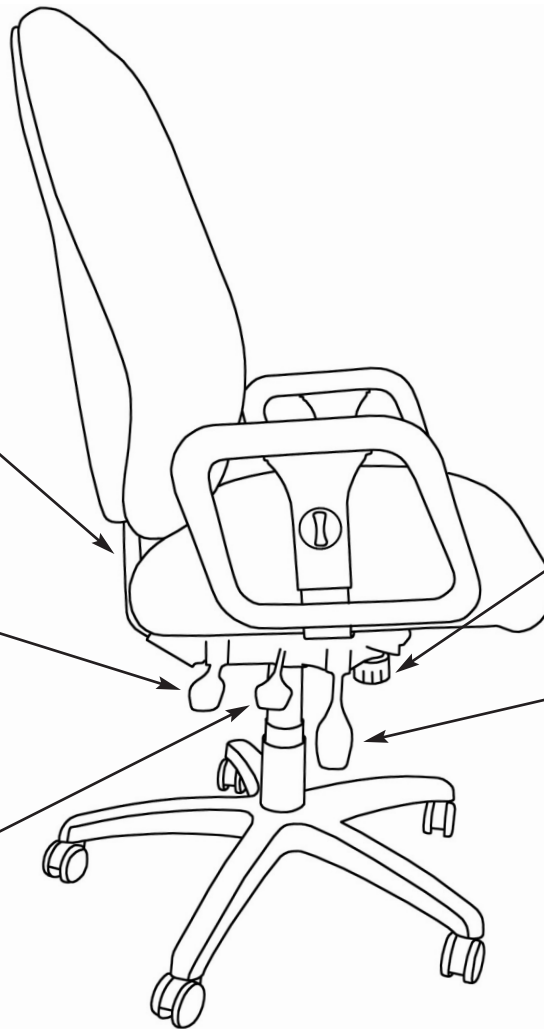

Tilt Tension Adjustment


If you decide to allow your chair to tilt freely, then you need to adjust the tension so the chair tilts according to your body weight. While seated in the chair, reach under the seat and turn the knob to the right to tighten and to the left to loosen. *Please note that this feature will only affect the chair if the user wants the chair to tilt freely.*

Tilting or Rocking Adjustment

When seated in the chair, drop right hand and take hold of the first paddle under the front of the seat. Lift up on this paddle. Lean back in the chair and it will freely tilt or recline. If you want to eliminate the tilting, locate the desired position during the tilting motion, then push down on that same paddle under the seat located on the right side of the chair. This will lock out the tilt.

Seat Slide Adjustment (#9 mechanism)

When seated in the chair, drop left hand and lift up on paddle located toward the front left of the seat. This will engage the movement of seat pan. While paddle is lifted slide seat forward or back incrementally to achieve desired seat depth. Once desired position has been established, release paddle to lock into permanent position.

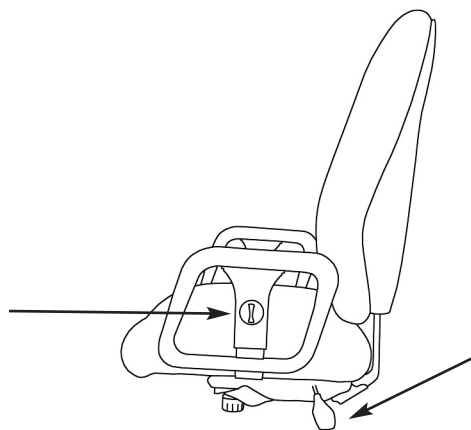

FEATURES:

- Heavy duty components
- Chair or stool
- Full function mechanism
- Height adjustable arms
- 350 lb. capacity

DIMENSIONS:

- Seat width: 25"
- Seat depth: 23"
- Back height: 23"-25½"
- Back width: 22"
- Chair weight: 49 lbs.
- Seat height from floor: 19"-24"

