




LOD 85/88 ASSEMBLY INSTRUCTIONS

877-263-5737
www.buzzseating.com

IN THE BOX COMPONENTS




Base



Cylinder



Caster (Qty. 5)



Control



Back



Seat



Thick Screw
Large Hole Washer



Screw
Small Washer




Plastic Bag of Optional Leveling Spacers
1/8" Plastic Spacer (Qty. 2)
1/4" Plastic Spacer (Qty. 2)
Long Screw (Qty. 2)

Large Allen Wrench


Small Allen Wrench

STEP 1


Attaching the Control

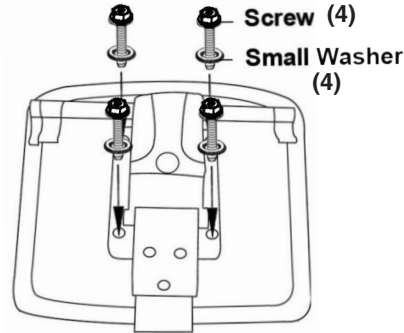

STEP 2

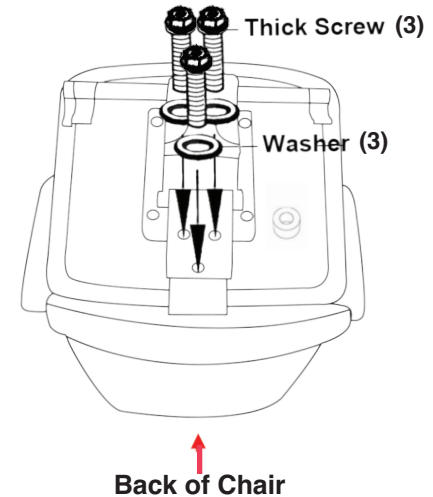

STEP 3

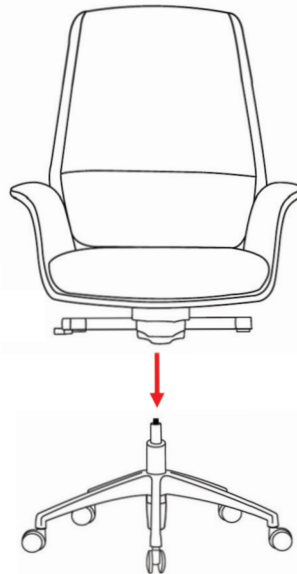

OPTIONAL LEVELING USING PLASTIC SPACERS

Two longer screws included in Optional Leveling Plastic Spacers Bag

Once assembled, leveling may be needed. If so, remove control and insert spacers as needed. Either 1/8" or 1/4" plastic spacers should be inserted either on the left side or the right side of the chair.

 1/8" Plastic Spacer

 1/4" Plastic Spacer

Plastic Spacers are optional!



Longer screws located in Optional Spacers bag must be used with these optional leveling spacers.