

UNibrace RB Installation Instructions


Hardware List

Location A

- 2 M8 Bolts @ 1.4"
- 2 M8 Nuts
- 4 M8 Washers
- 2 M8 Lock Washers
- 1 Powdercoated Spacer

Location B

- 2 M10 Bolts @ 1.25"
- 2 M10 Nuts
- 4 M10 Washers
- 2 M10 Lock Washers

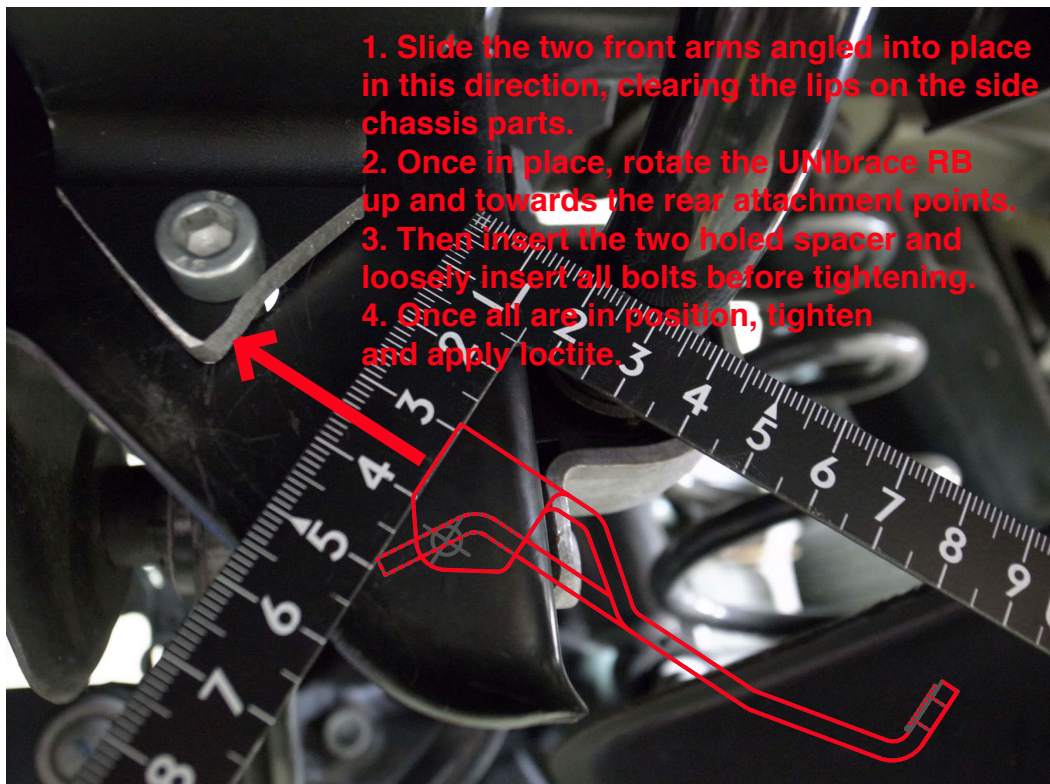

Drop rear portion of catback exhaust by releasing exhaust hangers. Exhaust does not need to be completely removed, but needs to be lowered for brace to clear during installation. It is most important to install the two forward legs first in the angle shown above. **They legs MUST be parallel to the front and rear of the car and inserted at the same time.** This angle, and simultaneous installation method, will allow the brace to clear the “flanges” at each side mounting points. Once they are lined up, use a rubber mallet to tap them into place and align with the existing bolt holes. Insert side bolts into locations “B” (from centerline towards sides of car). Rotate the brace up as shown in the photo below and insert the spacer. Insert bolts into locations “A” (from front of car towards rear). **Tighten all bolts equally.**





Brace in place without rear portion of exhaust. (Above)
Completed installation (Below)

