


UNibrace UB-T Installation Instructions


- A Long M8 Fastener
- B Washer at all bolt locations
- C Spacer for long M8 fasteners (between brace and front subframe)
- D Short M8 Fasteners
- E M8 cad plated nutserts

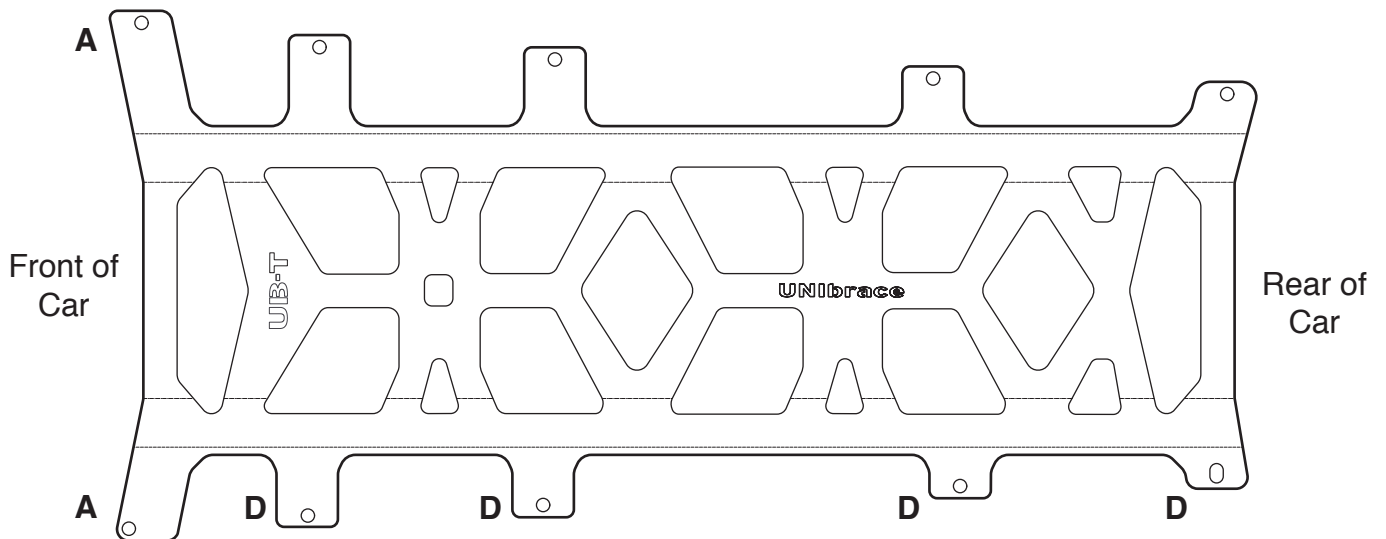

Note: Short M8 fasteners “D” are used with M8 nutserts “E” in existing screw locations. Long M8 Fasteners “A” mount at two forward locations, replacing rear bolts for control arms. Use UNibrace UB-T as a template to verify hole locations, remove brace and drill 13mm Ø [~1/2” Ø] holes for nutserts. Install using M8 nutsert installation tool. Use blue loctite on all M8 fasteners to assure that they do not vibrate loose.

UNibrace UB-T TTRS Installation Instructions

If you have a **TTRS**, the hardware package will contain 10 bolts (2 long/8 short) and 10 1/4" Ø cad plated spacers "F". All bolts are longer than the standard hardware package. I would recommend using double stick tape to tape the spacers onto each position on the brace and combine these with the larger spacers for the two front subframe attachment points shown as item "C" in the diagram above. If you have any questions please let me know before your install.

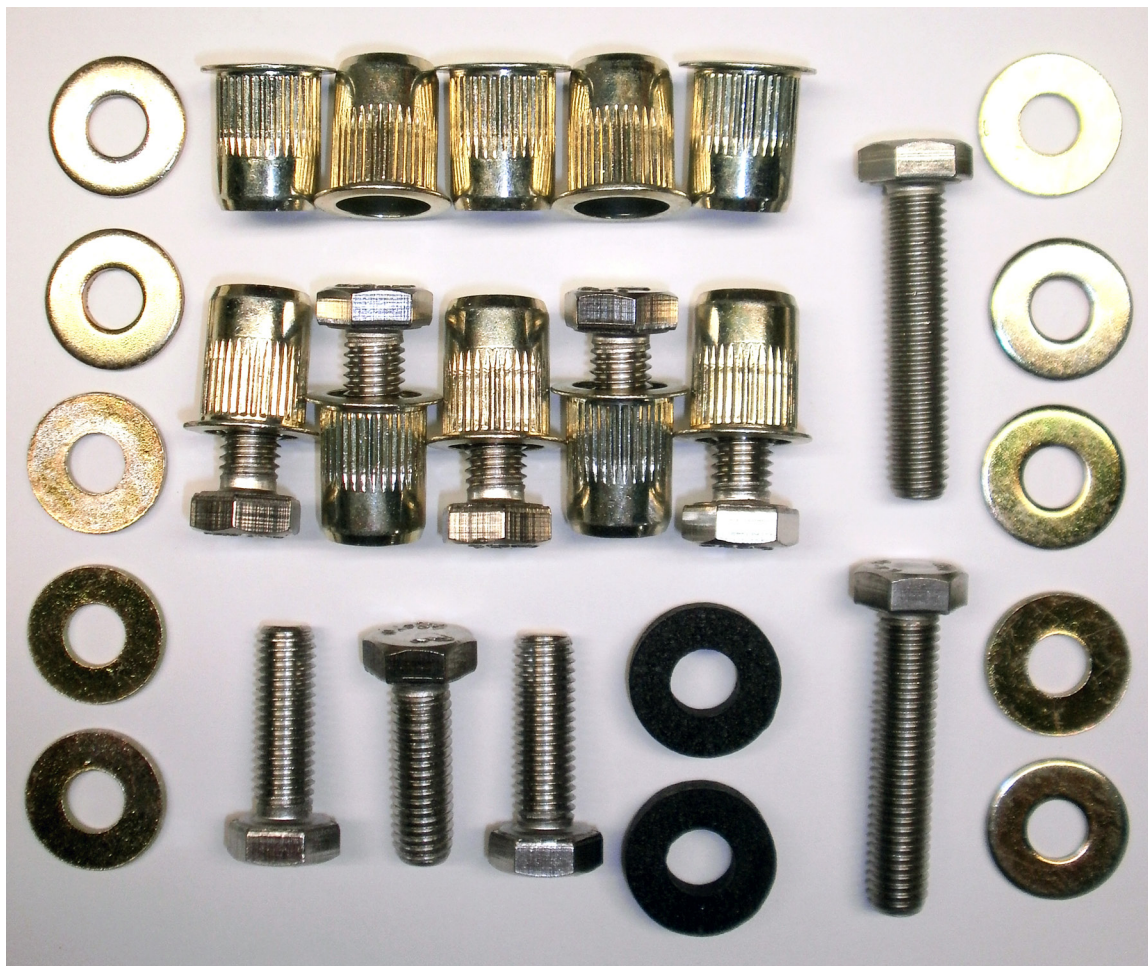

M8 Nutsert installation tool